
Publication No. 8B7492
04FEB99
Supersedes 8B7492
April 1996

**INSTALLATION INSTRUCTIONS
for the
AC EXTERNAL WIRING HARNESS
on the
*Kodak X-Omat 180 LP and 180 LPS PROCESSORS***



HEALTH IMAGING

A thick black horizontal line used to redact sensitive information.

PLEASE NOTE The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from any use of this information, even if loss or damage is caused by Kodak's negligence or other fault.



This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.



Important


- Modification No. 11 must be installed on the equipment before installing the new HARNESS.
- Installing this HARNESS without following these INSTALLATION INSTRUCTIONS may cause serious electrical damage to the PROCESSOR.

[1] Remove the existing HARNESS and discard.

[2] Is the equipment a 180 LP PROCESSOR above Serial No. 2999 or a 180 LPS PROCESSOR above Serial No. 12,999?


| Yes | No |
|--|----------------------|
| <ul style="list-style-type: none"> - Check that the new CONNECTOR J2 WIRING configuration is correct and matches CONNECTOR P2 WIRING configuration. (See Figure 1.) - Install the new HARNESS. | Do Steps 3, 4, and 5 |

Figure 1 CONNECTOR J2 (As received.)

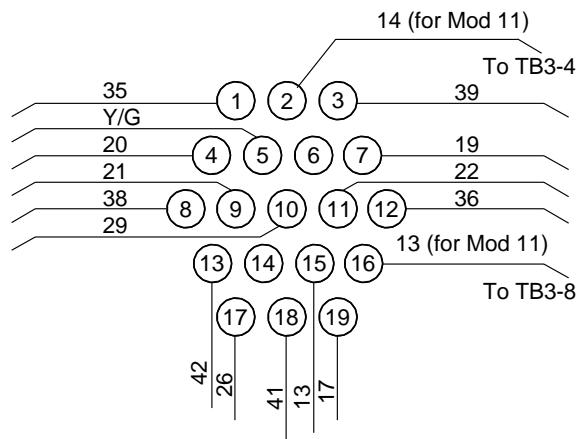

H127_0252AC

Figure 2 CONNECTOR J2 (Rewired to match the PROCESSOR.)

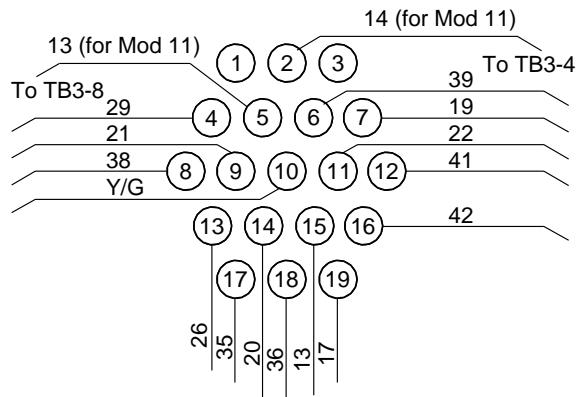

H127_0251AC

[3] Use EXTRACTING TOOL TL-1580 to move the WIRES on the new HARNESS. See the table.

| Wire | From J2 Position | From J2 Position |
|------|------------------|------------------|
| 39 | 3 | 6 |
| 20 | 4 | 14 |
| 29 | 10 | 4 |
| Y/G | 5 | 10 |
| 13 | 16 | 5 |
| 42 | 13 | 16 |
| 26 | 17 | 13 |
| 35 | 1 | 17 |
| 41 | 18 | 12 |
| 36 | 12 | 18 |

[4] Check that the CONNECTOR J2 WIRING matches the CONNECTOR P2 WIRING configuration. See Figure 2.

[5] Install the new HARNESS.

Publication History

| Print Date | Pub. No. | Affected Pages | File Name | Notes |
|------------|----------|----------------|---------------------|----------------|
| 01APR97 | 8B7492 | All | ii3227_2.doc | First Printing |
| 04FEB99 | 8B7492 | All | ii3227_2_04feb99.fm | Revision |

Kodak and *X-Omat* are trademarks.

